

# Work Order ID 86649

**\*86649\***

Page 1

July-06-12 11:11:54 AM

Item ID: D2690-17 Accept **\*N900040100\*** Setup Start **\*NS1\***  
 Revision ID: Stop **\*NS2\***  
 Item Name: Cable  
 Start Date: 7/06/12 Start Qty: 4.00 **\*4\*** Cust Item ID:  
 Required Date: 7/20/12 Req'd Qty: 4.00 **\*4\*** Customer:  
 Reference:

Approvals: Process Plan: *P* Date: 12-07-11 Tooling: \_\_\_\_\_ Date: \_\_\_\_\_ Run Start **\*NR1\***  
 QC: \_\_\_\_\_ Date: \_\_\_\_\_ SPC (Y/N): \_\_\_\_\_ Date: \_\_\_\_\_ Stop **\*NR2\***

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
<b>Draw Nbr</b>	<b>Revision Nbr</b>								
D2690	Rev B2								
100	Small Fab	0.00							
<b>*100*</b>									
Small Fab	Memo	0.00							
Small Fab	Assemble as per Dwg D2690								
110	QC5- Inspect part completeness to step on W/O	0.00							
<b>*110*</b>									
QC	Memo	0.00							
Quality Control									
120	Identify as per dwg & Stock Location <u>87/6</u>	0.00							
<b>*120*</b>									
Packaging	Memo	0.00							
Packaging									

*4x* *12/07/11*

*5/12/07/11* *12-07-11*

*4x* *SP 12-7-13*

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: \_\_\_\_\_ PAR #: \_\_\_\_\_ Fault Category: \_\_\_\_\_ NCR: Yes No DQA: \_\_\_\_\_ Date: \_\_\_\_\_

Resolution: \_\_\_\_\_ Disposition: \_\_\_\_\_ QA: N/C Closed: \_\_\_\_\_ Date: \_\_\_\_\_

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			

**NOTE:** Date & initial all entries

# Work Order ID 86649

**\*86649\***

Page 2

July-06-12 11:11:54 AM

Item ID: D2690-17 Accept **\*N900040100\*** Setup Start **\*NS1\***  
 Revision ID: Stop **\*NS2\***  
 Item Name: Cable  
 Start Date: 7/06/12 Start Qty: 4.00 **\*4\*** Cust Item ID:  
 Required Date: 7/20/12 Req'd Qty: 4.00 **\*4\*** Customer:  
 Reference:

Approvals: Process Plan: \_\_\_\_\_ Date: \_\_\_\_\_ Tooling: \_\_\_\_\_ Date: \_\_\_\_\_ Run Start **\*NR1\***  
 QC: \_\_\_\_\_ Date: \_\_\_\_\_ SPC (Y/N): \_\_\_\_\_ Date: \_\_\_\_\_ Stop **\*NR2\***

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
130	QC21- Final Inspection - Work Order Release	0.00							
<b>*130*</b>									
QC	Memo	0.00							
Quality Control									

MLT 12/07/13  
 MLT 12/07/13

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: \_\_\_\_\_ PAR #: \_\_\_\_\_ Fault Category: \_\_\_\_\_ NCR: Yes No DQA: \_\_\_\_\_ Date: \_\_\_\_\_

Resolution: \_\_\_\_\_ Disposition: \_\_\_\_\_ QA: N/C Closed: \_\_\_\_\_ Date: \_\_\_\_\_

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			

**NOTE:** Date & initial all entries

# Picklist Print

July-06-12 11:11:53 AM

Page 1

Work Order ID: 86649

Parent Item: D2690-17

Parent Item Name: Cable

Start Date: 7/06/12

Required Date: 7/20/12

Start Qty: 4.00

Required Qty: 4.00

Comments: IPP: C01.08.24Removed Manufacturer Release CertificationSM/EC

Component Item ID/ Item Name	Replacement Item ID	Mfg/ Purch	Bin Item	Primary Location	Last Location	Route Seq ID	Unit of Measure	Qty on Hand	Qty per Kit	Total Qty	Qty Issued	Date Issued	Status
CBL-1240 Cable		Purchased	No			100	f	776.2792	1.416	5.9621053		7/12/07/11	
				<u>Location</u>		<u>Loc Qty</u>		<u>Loc Code</u>					
				GA		776.279191							
				113565		3.911789							
				119021		259.334002				5.962			
				119690		13.0334							
				122190		500							
CBL-460 Loop Sleeve		Purchased	No			100	Each	578.0000	2	8		7/12/07/11	
				<u>Location</u>		<u>Loc Qty</u>		<u>Loc Code</u>					
				GA		578							
				121574		578							

**Dart Aerospace Ltd**

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: \_\_\_\_\_ PAR #: \_\_\_\_\_ Fault Category: \_\_\_\_\_ NCR: Yes No DQA: \_\_\_\_\_ Date: \_\_\_\_\_

Resolution: \_\_\_\_\_ Disposition: \_\_\_\_\_ QA: N/C Closed: \_\_\_\_\_ Date: \_\_\_\_\_


NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			

**NOTE:** Date & initial all entries



DESIGN <i>ME</i>	DRAWN BY <i>KE</i>	DART AEROSPACE LTD VICTORIA INTERNATIONAL AIRPORT, CANADA	
CHECKED <i>ME</i>	APPROVED <i>BW</i>	DRAWING NO. D2690	REV. B SHEET 1 OF 1
DATE 97.10.02		TITLE LANYARD ASSEMBLY	SCALE NTS
A	97.07.03	NEW ISSUE	
B	97.10.02	REVISED NOTE FOR ADDITIONAL LENGTH	
B1	<del>CP</del> 01.08.20	ADD NOTE TO REMOVE 2.25" OF SLEEVE	
B2	<del>CP</del> 04.06.24	ADDED TOLERANCE	

RELEASED  
971003 KE  
TSR A374

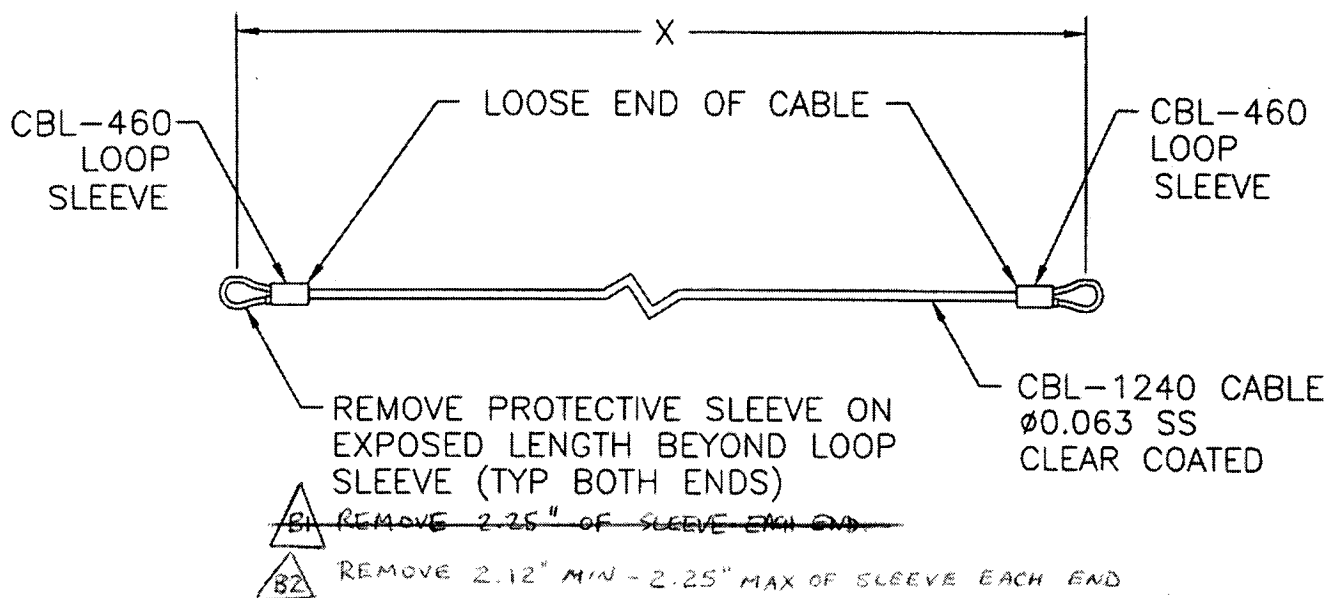

D2690-X

X = LENGTH IN INCHES

NOTE: CUT CABLE 2.50\* INCHES LONGER THAN 'X' LENGTH. FOLD ENDS TIGHT TO 'X' LENGTH AND CRIMP WITH SLEEVE AT END OF LOOSE END OF CABLE WITH CBL-705 CRIMPING TOOL.  
\*ADDITIONAL LENGTH MAY BE NECESSARY IN SOME APPLICATIONS. CUT AS REQUIRED.

NOTE: IN SOME CASES, END HAS TO BE CRIMPED AFTER ASSEMBLY WITH ATTACHING PARTS.

DEO's